


Parts list of brush cutter GTBC43M

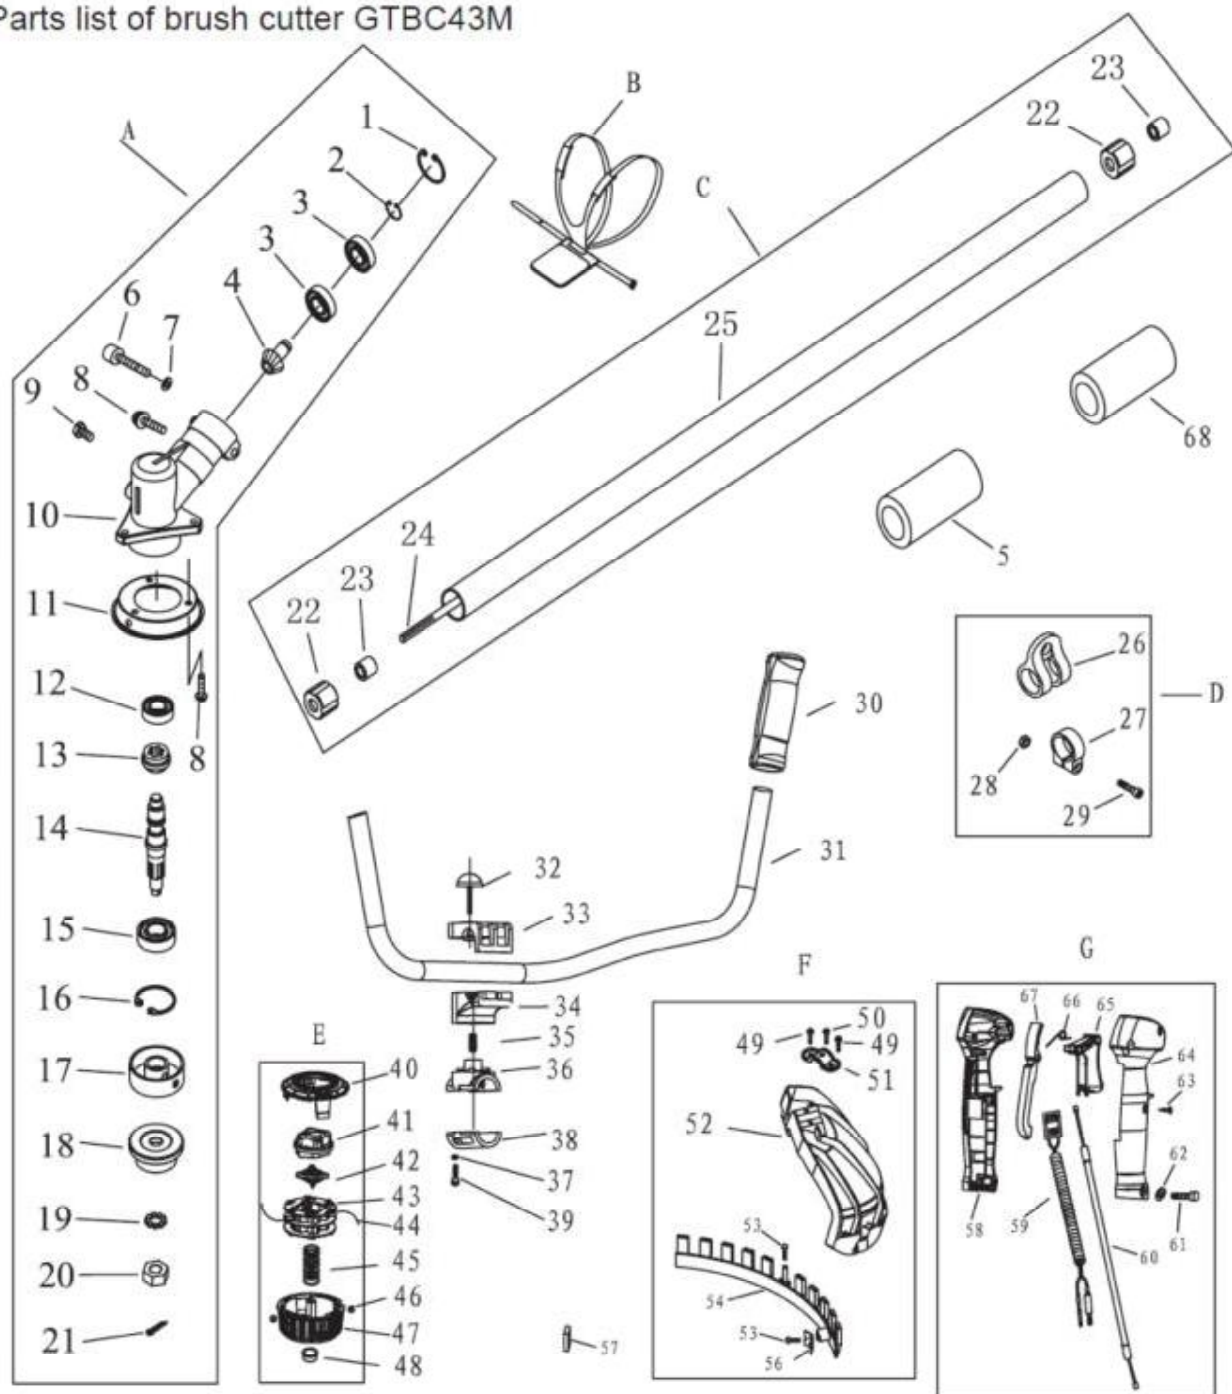


Parts list of brush cutter GTBC43M

A	CG430-CE. 3	GEAR CASE ASS'S	1
1	GB/T893. 2	STOP RING 26	1
2	GB/T894.1	STOP RING 10	1
3	GB/T276	BEARING 6000/P5	2
4	CG415D. 6-4	PINION	1
5	BC46-7	Bubble Jacket A	1
6	GB/T70.1	BOLT M6 x 20	1
7	GB/T93	WASHER 6	1
8	GB/T9074. 4	BOLT M5 x 12	4
9	GB/T9074. 11	BOLT M6 x 12	1
10	CG415D. 6-2	GEAR CASE	1
11	BG330H. 7. 3-1	BOLT PROTECTION COVER	1
12	GB/T276	BEARING 6000-2RZ/P5	1
13	BG-328. 9. 5-2	PINION	1
14	CG305F. 1-1	GEAR SHAFT	1
15	GB/T276	BEARING 6002-2RZ/P5	1
16	GB/T893. 2	STOP RING 32	1
17	BG305. 12. 4-5	CUTTER HOLDER CAP	1
18	CG305F. 1-3	CUTTER HOLDER	1
19	GB/T862. 1	S. WASHER	1
20	CG305F. 1-4	NUT	1
21	GB/T91	PIN 2 x 16	1
B	CG520-HL. 1	HARNESS ASS'Y	1
C	BC46. 1	PIPE COMP.	1
22	CG415D. 4-2	RUBBER COVEER	6
23	BG-328. 9. 4-4	OIL-BEARING	6
24	CG420. 2-3	DRIVE SHAFT	1
25	BC46. 1-1	DRIVE SHAFT PIPE	1
D	CG420. 3	Holder Ass'y	1
26	CG420. 3. 1	Holder Clamp	1
27	CG420. 3-1	Clamp	1
28	GB/T889. 1	NUT M5	1
29	GB/T70. 1	BOLT M5 x 20	1
30	BC36-8	Rubber Ringer	1
31	BC36-6	HANDGRIP	1
32	BC36. 2	Lock Bolt	1
33	BC36-5	CAP,UPPER	1
34	BC36-3	BRACKET	1
35	BC36-4	Spring	1
36	BC36-2	Eddy Seat	1
37	GB93	WASHER 5	2
38	BC36-1	CAP,Lower	1
39	BC36. 4-2	BOLT M5*16	2
E	BC36. 5	Rope Room Ass'y	1

40	BC36. 5-2	CAP Rope Room	1
41	BC36. 5-1	Bounce Object	1
42	BC36. 5-3	Rope Cap	1
43	BC36. 5-4	Rope Seat	1
44		Rope	1
45	BC36. 5-6	Spring	2
46	BC36. 5-5	Rope Cover	2
47	BC36. 5. 1	Rope Room	1
48	BC36. 5. 1-1	Nut	1
F	BC46. 2	SAFETY GUARD ASS'Y	1
49	BC36. 4-2	BOLT M5*12	2
50	GB/T70. 1	BOLT M5*10	1
51	BC46. 2-1	SAFETY GUARD BRACKET	1
52	BC46. 2. 1	SAFETY GUARD	1
53	GB/T845	BOLT ST4.2*16	3
54	CG420. 7. 1.1-1	Guard	1
55			
56	BC46. 2. 2-1	Blade	1
57	BC46-5	Blade Cover	1
G	BC36. 3	Lever Ass'y	1
58	BC36. 3. 3	Box, Left	1
59	BC36. 3. 1	Stop Button Comp.	1
60	BC36. 3. 2	Cable Comp.	1
61	GB/T818	BOLT M5*30	1
62	GB/T848	WASHER 5	1
63	GB/T845	BOLT ST3. 5*13	4
64	BC36. 3-1	Box,Right	1
65	BC36. 3-6	Handgrip	1
66	BC36. 3-5	Spring	1
67	BC36. 3-3	HANDGRIP	1
68	BC46-6	Bubble Jacket	1

Parts list of engine
for brush cutter
GTBC43M

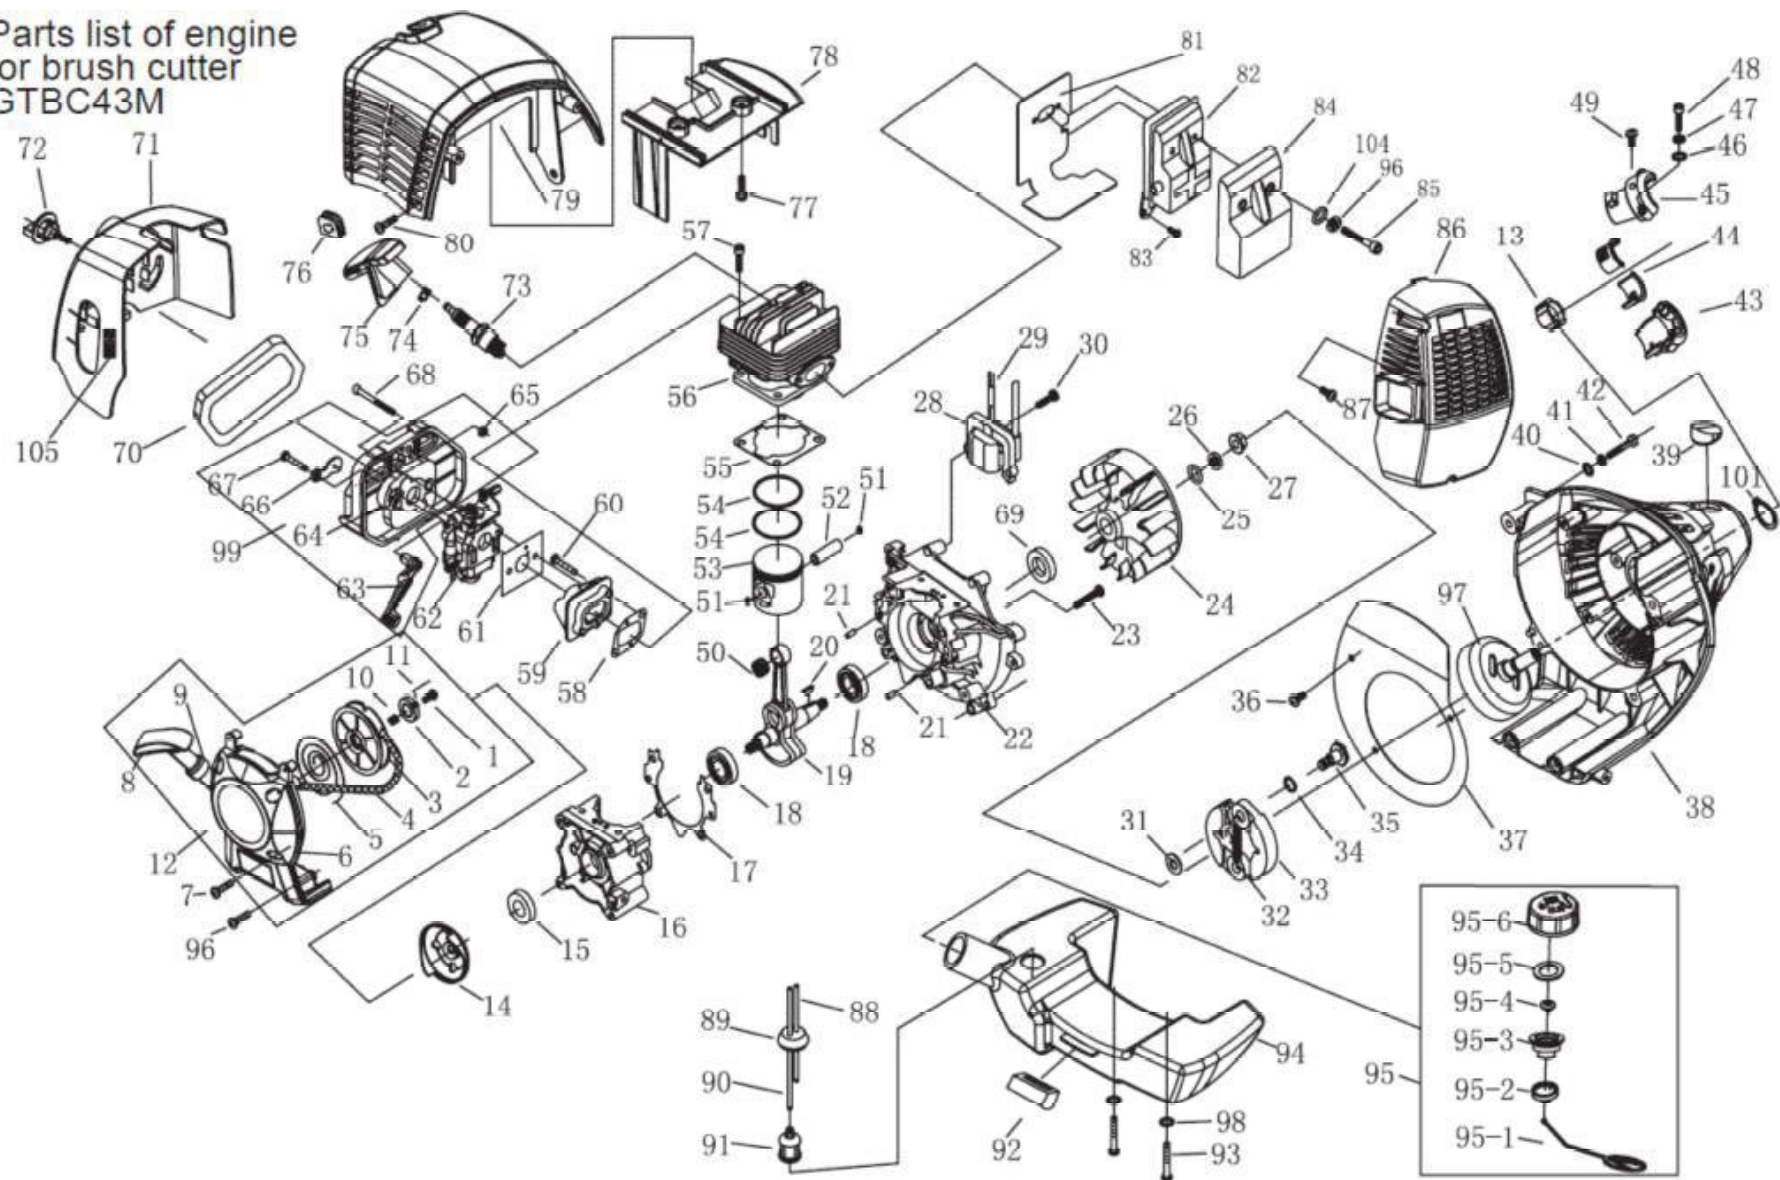

Parts list of engine for brush cutter GTBC43M

NO.	Part No.	Part Name	Qty.
1	1E36FE. 9-3	Screw	1
2	1E36FE. 9-4	Ratchet	1
3	1E36FE. 9-1	Start Rope Reel	1
4	1E36FE. 9-5	Rope	1
5	1E36FE. 9-7	Recoil Spring	1
6	HA36. 6-1	Start Cover Ass'y	1
7	GB9074.4	Screw M5 x 14	4
8	CG520-HL. 5-1	Start Handle	1
9	HA46. 8-2	Ring	1
10	1E36FE. 9-6	Spring	1
11	1E36FE. 9-2	Start pole	2
12	HA46. 8	Starter	1
13	CG430H. 1-4	Rubber Cover B	2
14	1E36FE. 7	Start Reel	1
15	1E36F. 2	Oil-seal	1
16	1E40F-E. 6-2	Crank Case	1
17	1E40F-5. 8-4	Gasket	1
18	GB/T276	Bearing 6202/P6	2
19	1E40F-E. 4. 1A	Crank Shaft	1
20	GB1099	Key 3x5x13	1
21	GB119	Pin B5 x 12	2
22	HA46. 6-1	Crank Case	1
23	GB9074.4	Screw M5 x 30	4
24	HA46. 2. 1. 1	MAGNETO ROTOR COMP.	1
25	GB/T97. 1	Washer 8	1
26	GB/T859	Washer 8	1
27	GB6170	Nut M8	1
28	HA46. 2. 1. 2	IGNITION COIL COMP.	1
29	HA46. 2. 2	Cord Comp.	1
30	GB9074. 13	Bolt M5 x 20	2
31	1E36F-3	Washer B	2
32	1E36F-E. 6A-1	Spring	1
33	1E36F-2C. 4. 1	Expander	2
34	1E40F-5-11	Washer	2
35	1E40F-5-12	Screw Pin	2
36	GB845	Screw ST4. 2X9. 5	3
37	HA46. 4-1	Shutterer	1
38	HA46. 4. 1	Clutch Case	1
39	HA46. 4. 1-2	Stopple	2
40	GB97. 1	Washer 5	4
41	GB93	Washer 5	4
42	GB70. 1	Screw M5 x 16	4
43	CG430H. 1-2	Clamp B	1

44	CG430H. 1-3	Rubber Cover A	2
45	CG430H. 1-1	Clamp A	1
46	GB97. 1	Washer 5	2
47	GB93	Washer 5	2
48	GB70. 1	Screw M5 x 25	2
49	GB9074. 4	Screw M5 x 16	1
50	1E44F-2A. 2-3	Bearing	1
51	1E40F-03. 02. 01	Ring	2
52	1E46FP. 6-3	Piston Pin	1
53	1E40F-E. 4-1	Piston	1
54	1E40FP-3Z. 3-5	Piston Ring	2
55	1E40F-E-3	Gasket	1
56	1E40F-2E-1	Cylinder	1
57	GB/T70. 1	Screw M5 x 18	4
58	1E40F-E-8	Gasket	1
59	HA46. 9	Admitting Pipe	1
60	GB70. 1	Screw M5 x 25	2
61	1E40F-E-7	Gasket	1
62	1E40F-2E. 1A	Carburetor	1
63	HA28L. 1-3	Choker Handle	1
64	HA46. 5. 1. 1	Cleaner inside cover	1
65	GB/T809	Nut M4	1
66	HA36. 4. 1-2	CHOKER	1
67	GB/T846	Screw ST4. 2 x 13	1
68	GB/T70. 1	Screw M5 x 50	2
69	1E40F-5. 9	Oil-seal	1
70	HA28L. 1-2	Filter Net	1
71	HA46. 5-1	Cleaner Outside Cover	1
72	HA28L. 1. 1	Screw	1
73	L8RTC	Spark Plug	1
74	1E40F-3A. 8-2	Spring	1
75	HA46. 2. 1-1	Cap	1
76	1E40F-5. 3-1	Plug	1
77	GB845	Screw ST4. 2X6. 5	2
78	HA46. 3-1	Guide Clapboard	1
79	HA46. 3-2	Guide Cover	1
80	GB845	Screw ST2. 9X9. 5	2
81	HA46-1	Gasket	1
82	1E40F-2E.2	Muffler	1
83	GB9074. 4	Screw M5 x 12	1
84	1E40F-E-6	Cover	1
85	GB70. 1	Screw M6x 60-12. 9	2
86	HA46-2	Muffler Cover	1
87	GB/T845	Screw ST4. 2 x 13	3
88	EB-415. 4. 2-4	Fuel Pipe 57	1
89	EB-415. 4. 2-2	Plug	1
90	CG420. 1. 3. 2-2	Fuel Pipe 130	1

91	1E34F. 9. 2-3A	Cleaner Cover	1
92	1E40F-5A-2	Rubber Cover	1
93	GB70. 1	Screw M5 x12	2
94	HA46. 7-1	Fuel Tank	1
95	1E32FL. 6. 2	Lid Ass'y	1
95-1	1E32FL. 6. 2-4	Chain	1
95-2	1E32FL. 6. 2-3	End Cover.	1
95-3	1E32FL. 6. 2-2	Inside Cover	1
95-4	EB-415. 4. 1. 1-1	Inlet	1
95-5	CG420. 1. 3. 1-2	Gasket	1
95-6	1E32FL. 6. 2-1	Fuel Tank Lid	1
96	GB93	Washer 6	2
97	HA46. 4. 2	Clutch Drum Comp.	1
101	GB894. 1	Ring 15	1
102	GB96	Washer 5	2
103	HA46. 5. 1	Cleaner inside cover Ass'y	1
104	GB97. 1	Washer 6	2
105	1E40F-3A. 3-5	Lable	1