



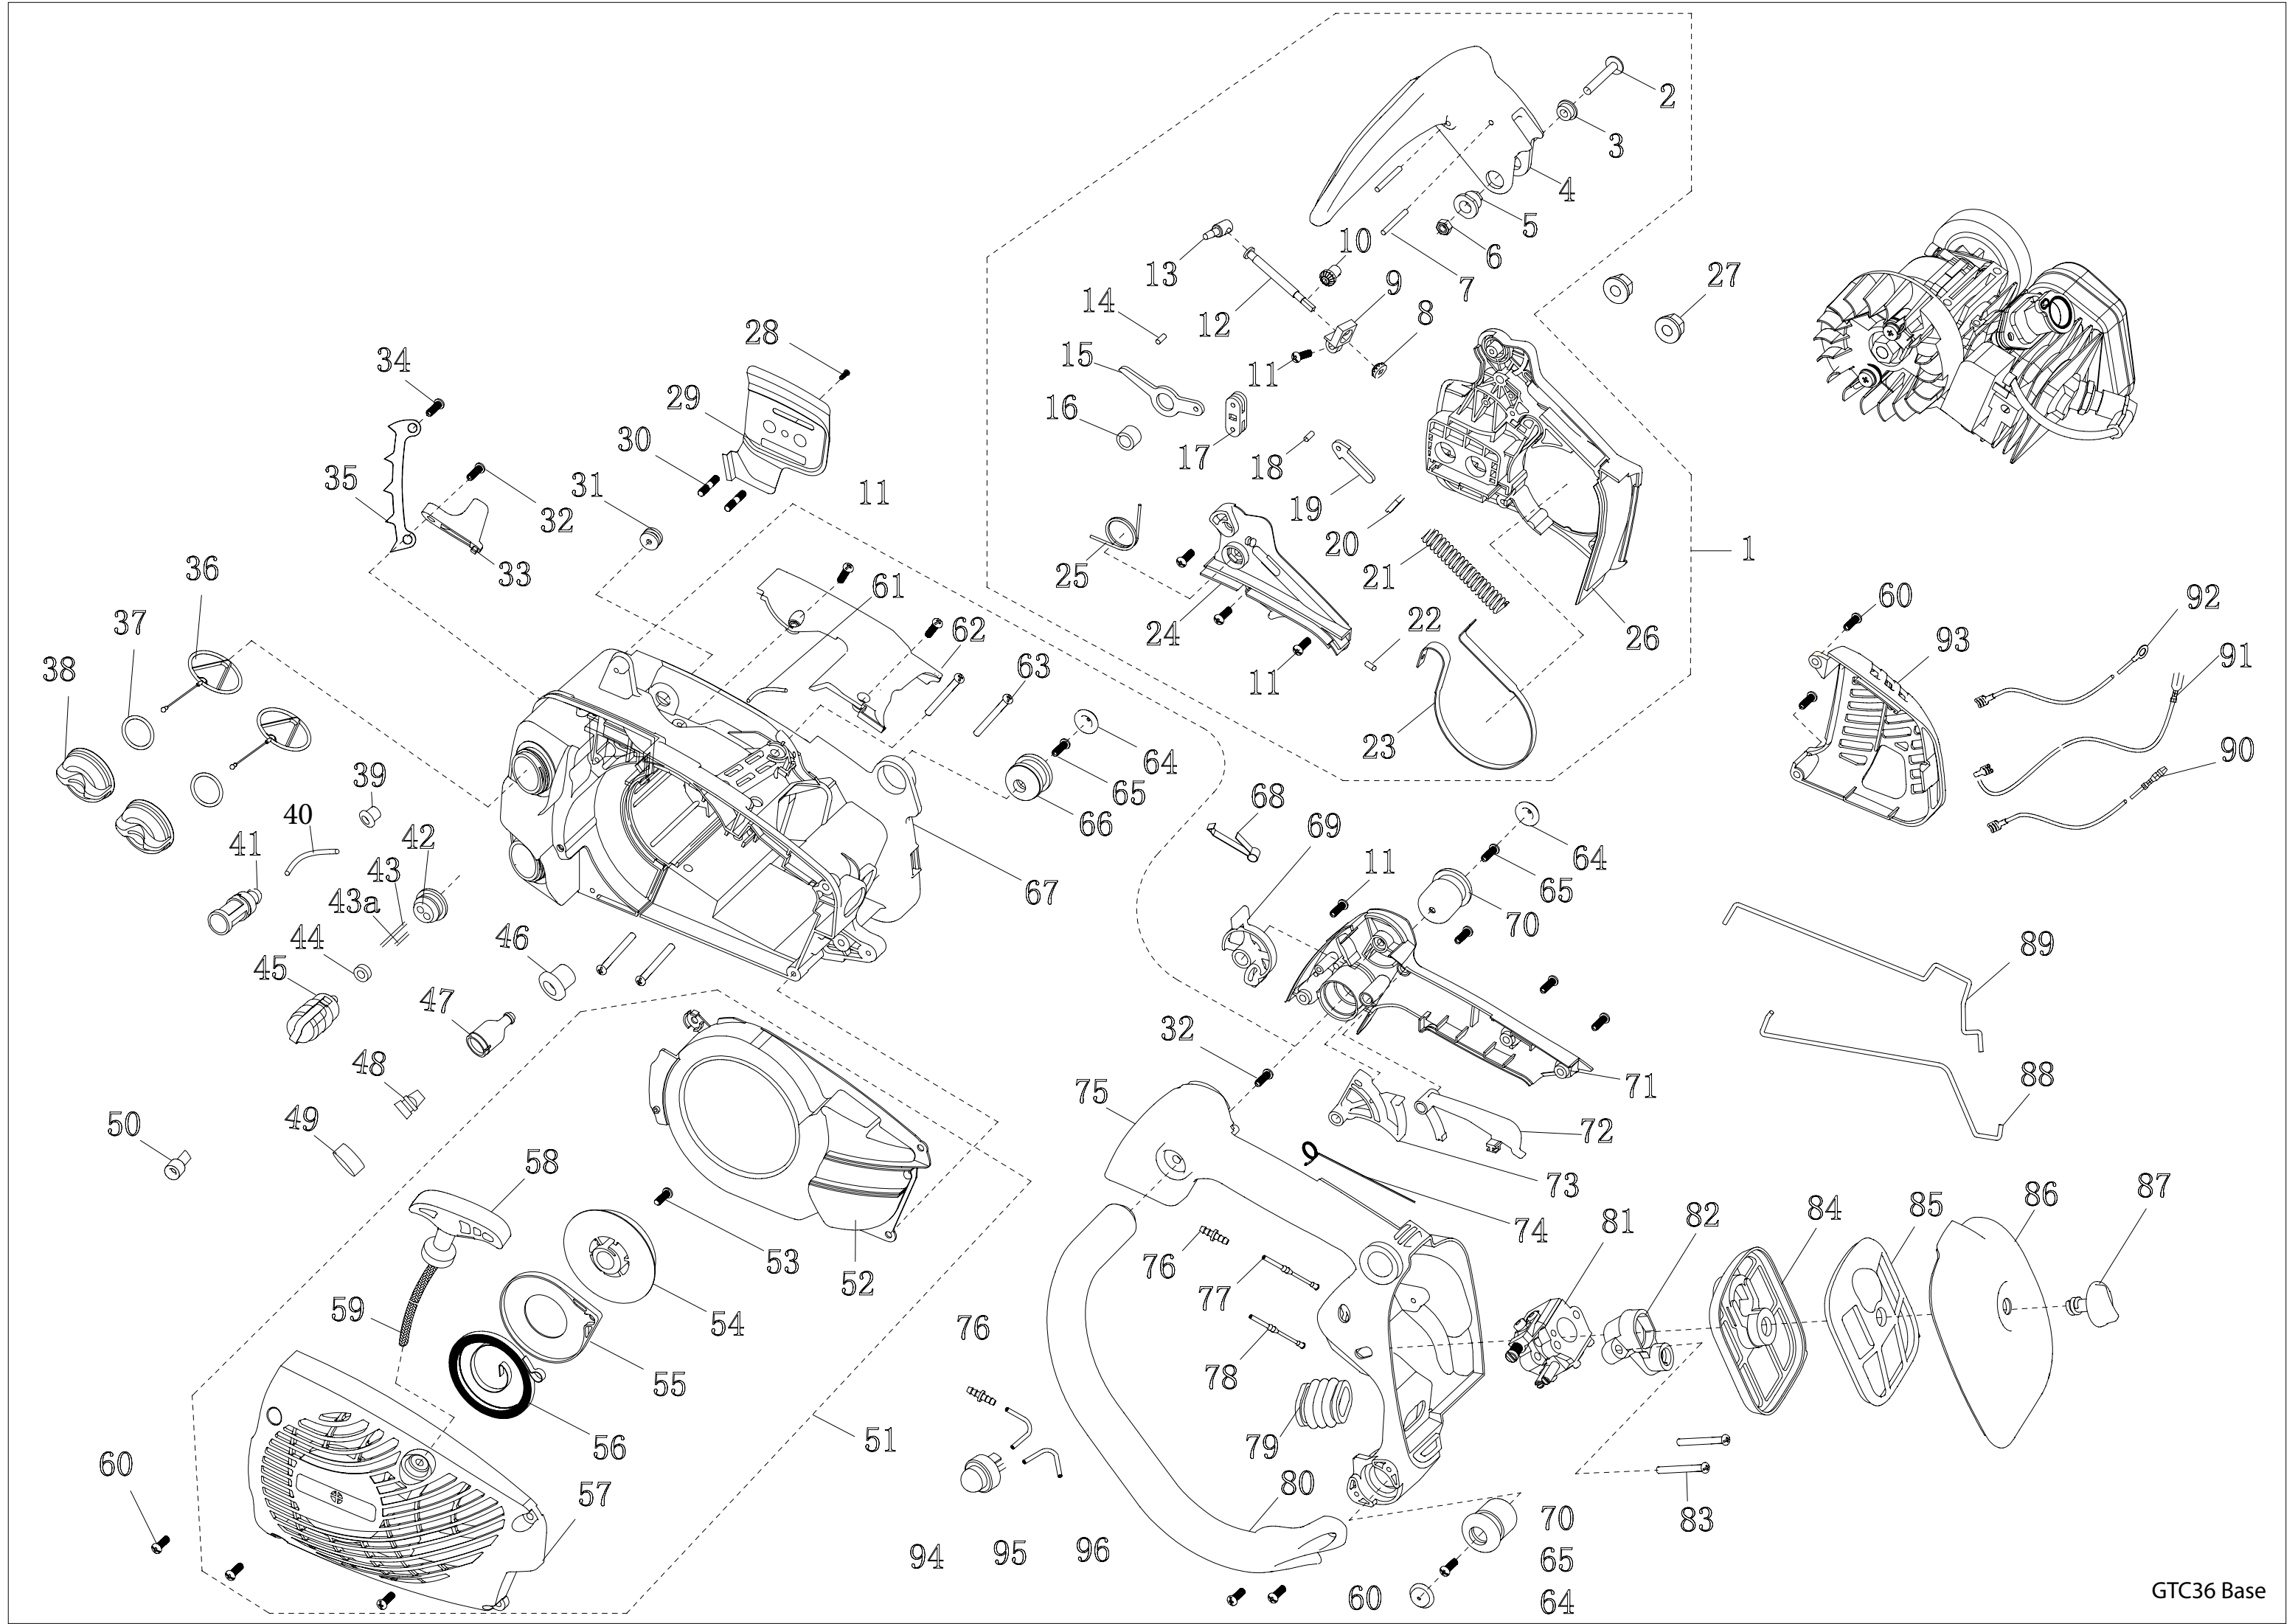

BASE UNIT OF GTC36			
No.	Code	Description(EN)	QTY
1	YD36.04.00-00	clutch cover assembly	1
2	YD36.04.00-13	screw M5x32	1
3	YD36.04.00-11	screw bush	1
4	YD36.04.00-2	front-hand guard	1
5	YD36.04.00-12	nut bush	1
6	GB/T6185.1	lock-nut M5	1
7	GB/T119.2	pin 3x26	2
8	YD36.04.00-17	passively conical gear	1
9	YD36.04.00-18	conical gear base	1
10	YD36.04.00-16	active conical gear	1
11	GB/T845	tapping screw ST4.2x12	6
12	YD36.04.00-15	tightened screw	1
13	YD36.04.00-14	tension block	1
14	GB/T119.2	pin 3x14.7	1
15	YD36.04.00-8	brake sway rod	1
16	YD36.04.00-10	sway rod bush	1
17	YD36.04.00-7	main level	1
18	GB/T119.2	pin 3x7.8	1
19	YD36.04.00-6	brake control rod	1
20	YD36.04.00-5	spring base	1
21	YD36.04.00-4	brake spring	1
22	GB/T119.2	pin 3x9.7	1
23	YD36.04.00-3	brake strap	1
24	YD36.04.00-1	brake spring cover plate	1
25	YD36.04.00-9	returned torsion rod spring	1
26	YD36.04.01-00	clutch cover	1
27	GB/T6177.1	nut M8	2
28	GB/T845	tapping screw ST4.2x10	1
29	YD36.00.00-17	cover plate	1
30	YD36.03.00-13	double-head screw	2
31	YD36.03.00-5	stop top	1
32	GB/T845	tapping screw ST4.8x19	2
33	YD36.00.00-15	chain catcher	1
34	GB/T845	tapping screw ST4.8x13	1
35	YD36.00.00-16	bumper spikes	1
36	YD36.03.02-2	fuel cover retainer	2
37	YD36.03.02-3	"o" ring	2

38	YD36.03.02-1	fuel cover	2
39	YD36.03.00-7	oil tube root	1
40	YD36.03.00-6	oil tube 2.5x6x160	1
41	YD36.03.04-00	oil filter components	1
42	YD36.03.00-4	fuel tube root	1
43	YD36.03.00-1	fuel tube 2.5x5x262	1
43a	YD36.03.00-15	return fuel tube B	1
44	YD36.03.00-3	tube circlip	2
45	YD36.03.03-00	petrol filter components	1
46	YD36.03.00-11	balancer root	1
47	YD36.03.00-8	balabcer body	1
48	YD36.03.00-9	balancer rubber	1
49	YD36.03.00-10	balancer cover	1
50	YD36.03.00-12	aeration jet	1
51	YD36.02.00-00	starter assembly	1
52	YD36.02.00-1	bossing	1
53	GB/T9074.19	tapping screw ST4.8x13	1
54	YD36.02.01-1	start plate	1
55	YD36.02.01-2	coil-spring gland	1
56	YD36.02.01-4	start coil-spring	1
57	YD36.02.02-00	starter cover	1
58	YD36.02.01-3	start handle	1
59	YD36.02.01-5	stretching wire 2.5x870	1
60	GB/T845	tapping screw ST4.2x16	12
61	YD36.03.00-14	oil tube 2.5x6x90	1
62	YD36.00.00-2	conductor cover plate	1
63	YD36.00.00-20	screw M5x20	4
64	YD36.00.00-14	dust cover	3
65	YD36.00.00-12	handle screw	3
66	YD36.03.05-00	cushion socker ϕ 22.5x20	1
67	YD36.03.01-00	base components	1
68	YD36.01.11.00-1	ground scrip	1
69	YD36.00.00-9	choke trigger	1
70	YD36.00.02-00	cushion socker ϕ 22.5x30	2
71	YD36.00.00-5	rear handle cover	1
72	YD36.00.00-7	trigger control rack	1
73	YD36.00.00-6	trigger	1
74	YD36.00.00-8	trigger torsion rod spring	1

75	YD36.00.01-00	rear handle	1
76	YD36.03.00-2	oil ingoing tube connector	2
77	YD36.00.00-18	fuel outgoing tube	1
78	YD36.00.00-19	suction tube	1
79	YD36.00.00-4	air lead tube	1
80	YD36.00.00-1	front handle	1
81	YD36.01.06.00-00	carburetor	1
82	YD36.01.00-2	air intake socket	1
83	GB/T9074.4	screw M5x50	2
84	YD36.01.08.02-00	air filter nether cover	1
85	YD36.01.08.01-00	air filter upper cover	1
86	YD36.05.00-1	air filter cover	1
87	YD36.05.00-2	air filter cover screw	1
88	YD36.00.00-10	trigger rod	1
89	YD36.00.00-11	choke rod	1
90	YD36.01.11.02-00	extinction conductor 0.5x140	1
91	YD36.01.11.03-00	extinction conductor 0.5x235	1
92	YD36.01.11.04-00	ground wire 0.5x200	1
93	YD36.00.00-3	muffler cover	1
94	YD38-3.03.00-4	primer bulb	1
95	YD36.00.00-20	return fuel tube A	1
96	YD36.00.00-21	primer tube	1

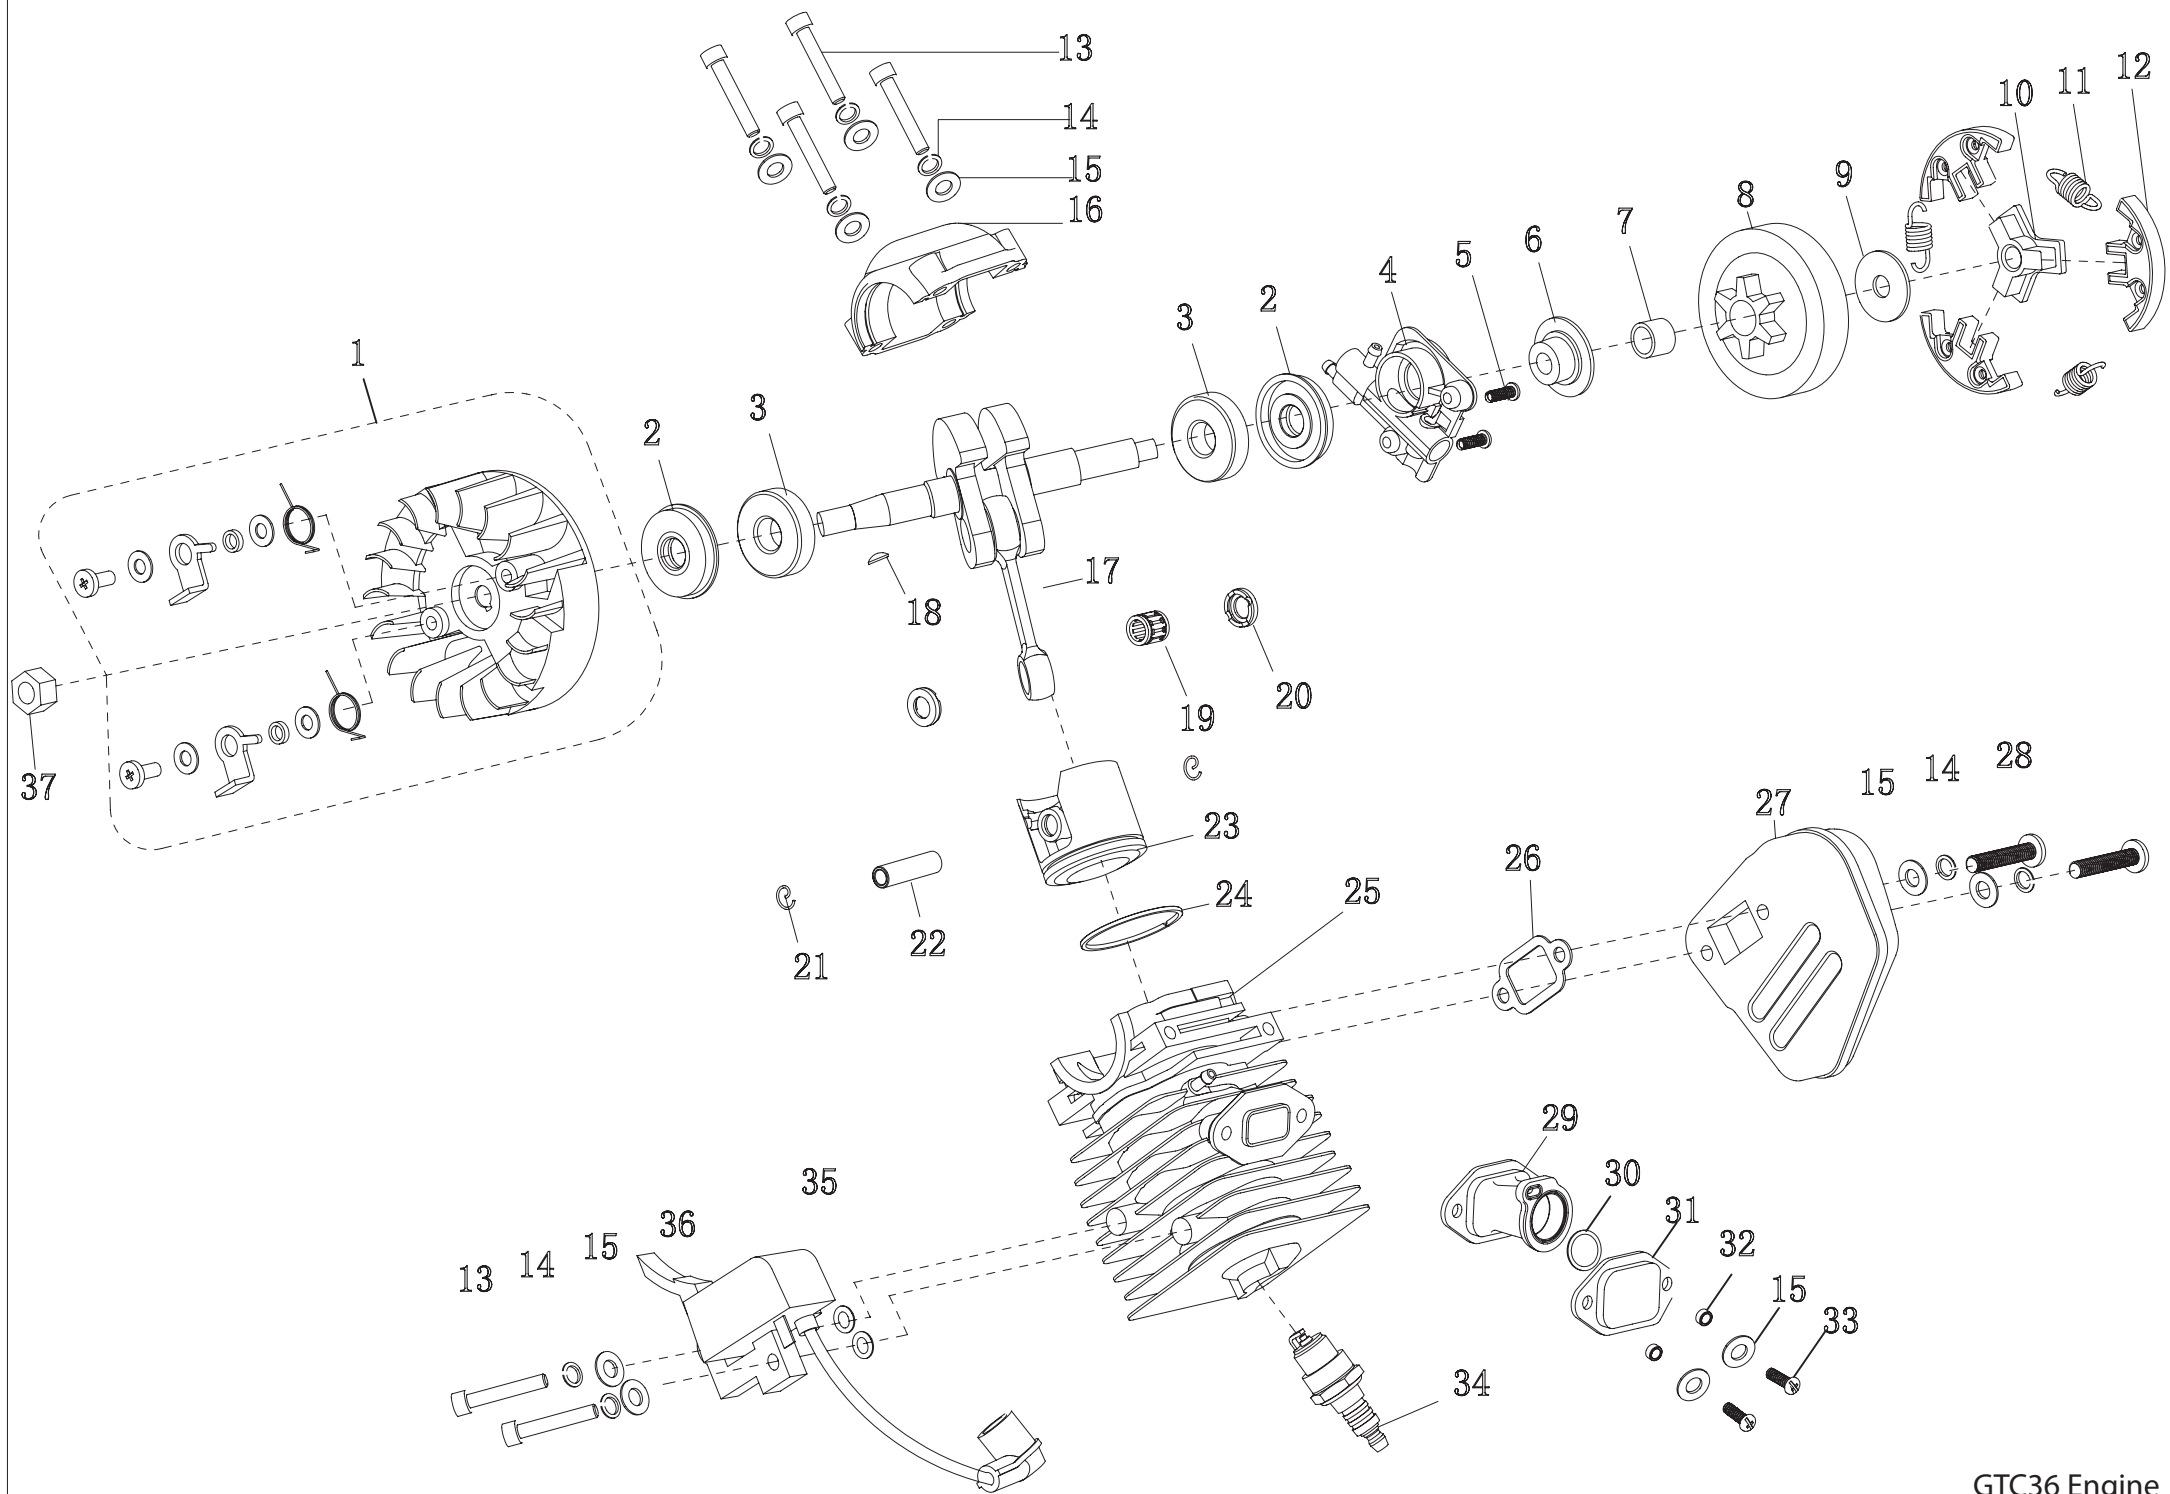

ENGINE UNIT OF GTC36			
No.	Code	Description(EN)	QTY
1	YD36.01.10.00-00	flywheel assembly	1
2	YD36.01.03.02-00	oil seal 12x32x5.5	2
3	GB/T276	bearing 6201 grade D 12x32x10	2
4	YD36.01.15.00-00	oil pump	1
5	GB/T9074.4	adjust screw M4x12	2
6	YD36.01.03.00-5	worm	1
7	YD36.01.00.01-00	needle bearing 10x13x13	1
8	YD36.01.13.00-1	clutch shell	1
9	YD36.01.13.00-2	clutch adjusting washer	1
10	YD36.01.13.01-1	retainer	1
11	YD36.01.13.01-3	clutch extension spring	3
12	YD36.01.13.01-2	shoe block	3
13	GB/T70.1	screw M5x25	4
14	GB/T93	spring washer 5	8
15	GB/T97.1	washer 5	10
16	YD36.01.01.00-1	cylinder cover	1
17	YD36.01.03.01-00	crank shaft components	1
18	GB/T1099	semicircular key 3x3.5x10	1
19	YD36.01.03.04-00	needle bearing 8x11x12	1
20	YD36.01.03.00-3	needle bearing ring	2
21	YD36.01.03.00-4	piston pin circlip	2
22	YD36.01.03.00-2	piston pin	1
23	YD36.01.03.03-00	piston	1
24	YD36.01.03.00-1	piston ring	1
25	YD36.01.01.01-00	cylinder body components	1
26	YD36.01.00-4	silencer sealing plate	1
27	YD36.01.09.00-00	silencer assembly	1
28	GB70.1	screw M5x40	2
29	YD36.01.00.02-00	air intake tube	1
30	YD36.01.00-3	retainer	1
31	YD36.01.00-9	heat insulation	1
32	YD36.01.00-10	lining	2
33	GB/T818	screw M5x16	2
34	YD36.01.11.05-00	spark plug LD L8RTF	1
35	YD36.01.00-7	igniter washer	2
36	YD36.01.11.01-00	igniter	1
37	GB/T6177.2	nut M8x1	1