


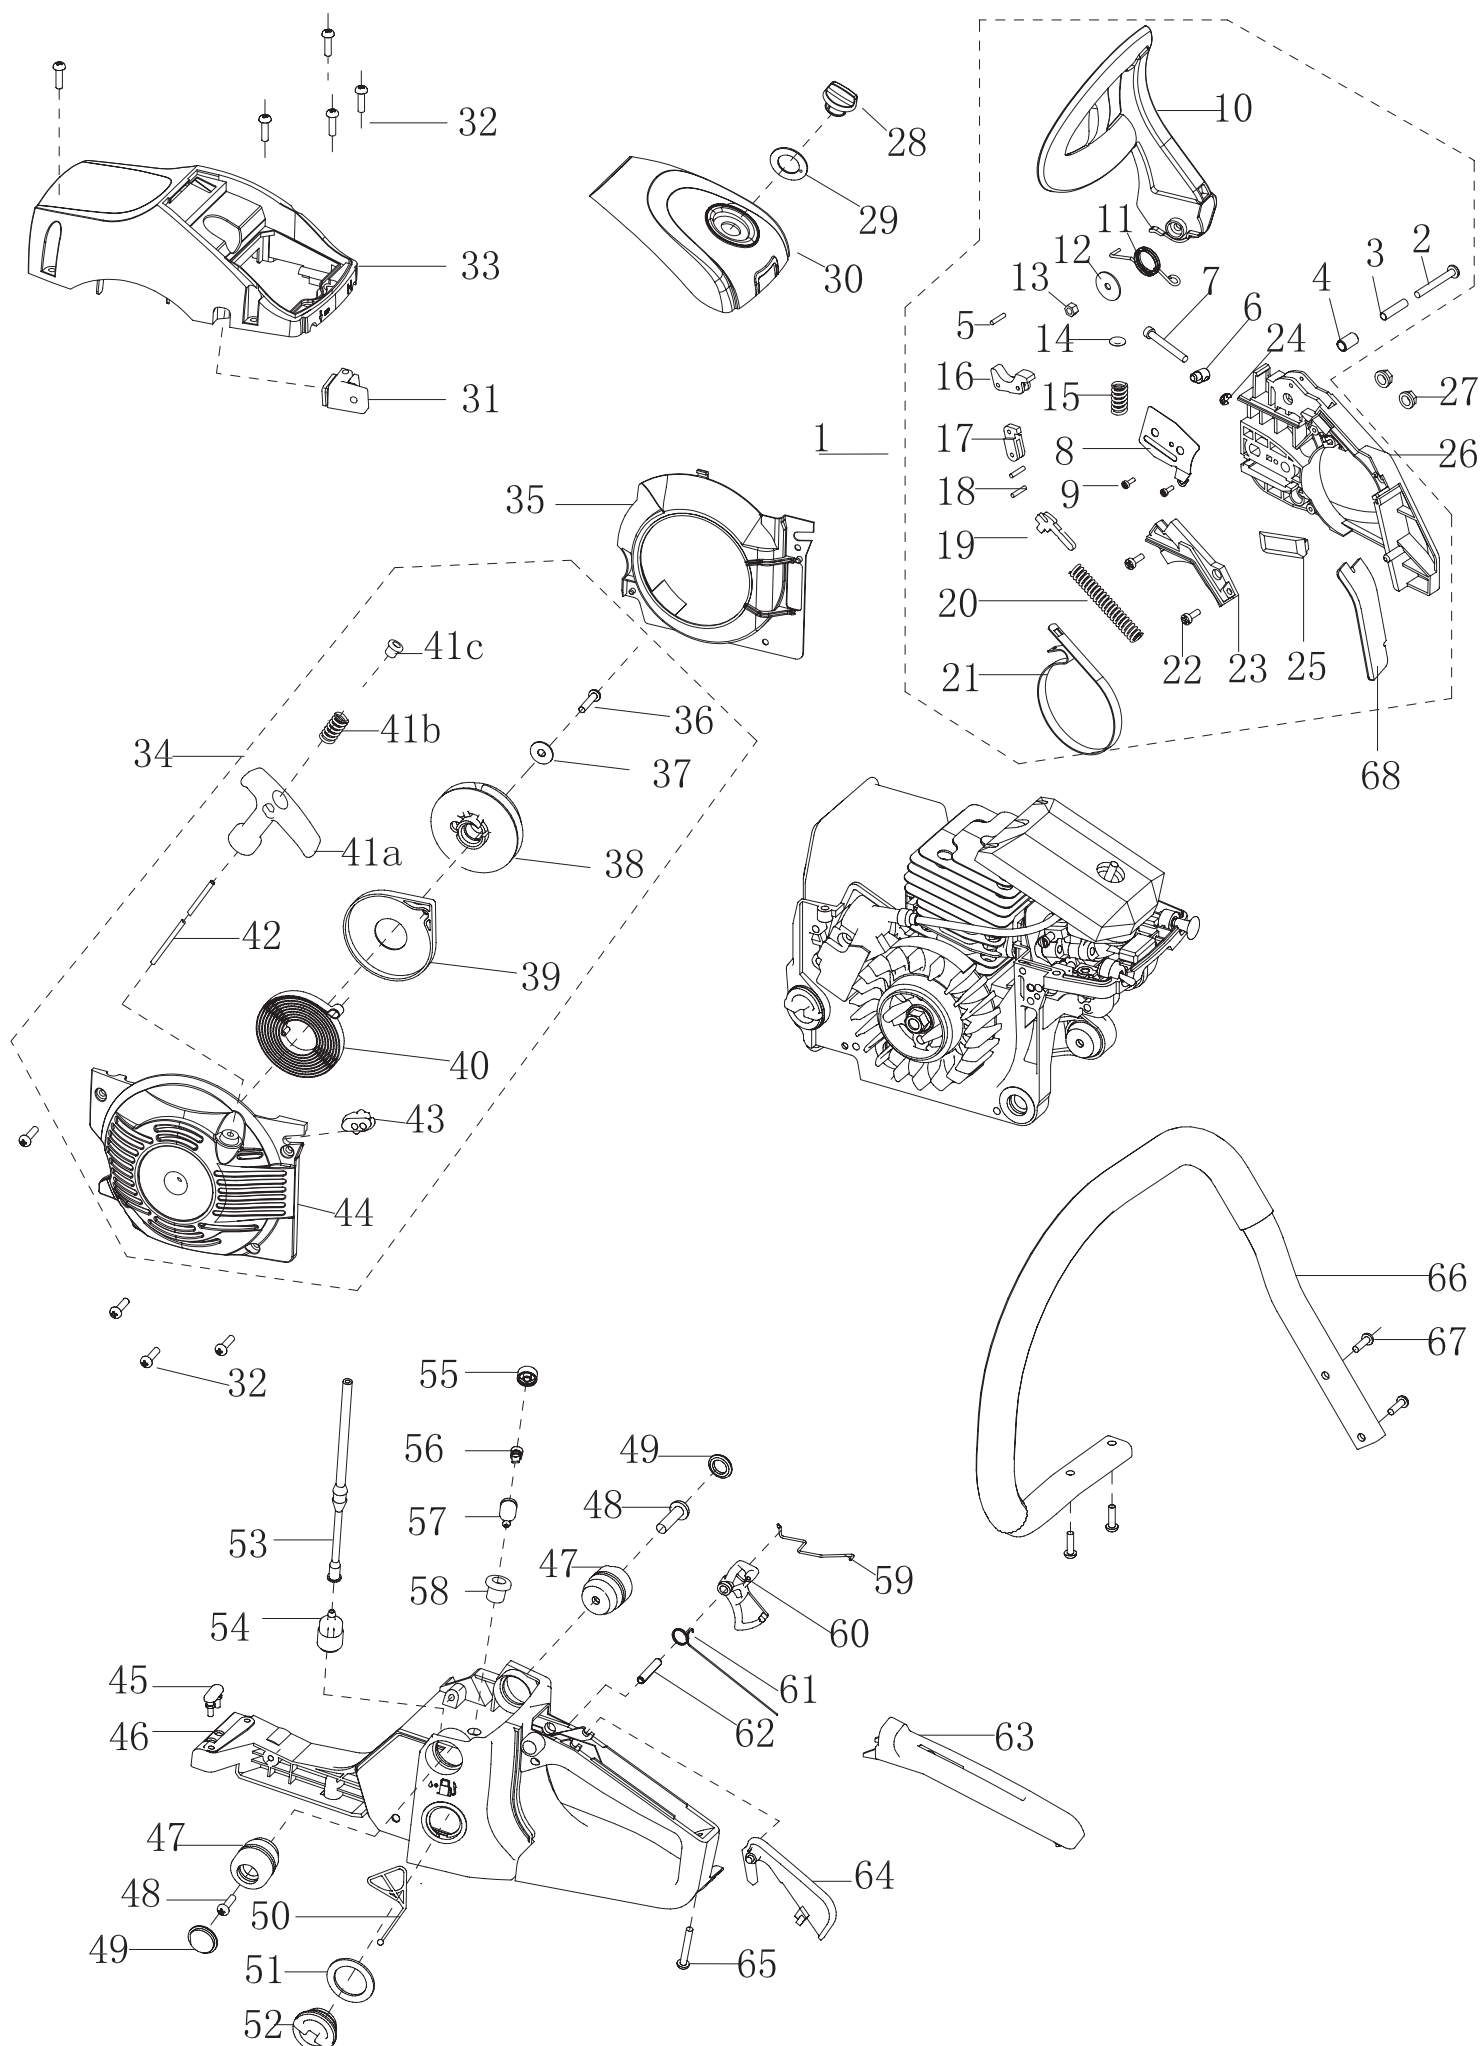


Fig 1 GTC45-50 Base Part

No	Code	ITEM	qty
1	YD45-4.04.00-00	right cover assembly	1
2	YD45-3.04.00-14	screw M5X36	1
3	YD45-3.04.00-12	shield pipe	1
4	YD45-3.04.00-11	pipe	1
5	GB/T119.2	pin 3 x 14	1
6	YD45-3.04.00-16	tension block	1
7	YD45-3.04.00-15	tightener screw	1
8	YD45.04.00-11	tensioner cover plate	1
9	GB/T845	tapping screw ST4.2 X 9.5	2
10	YD45-4.04.00-2	front damper	1
11	YD45-3.04.00-8	brake torsion rod spring	1
12	YD45-3.04.00-13	washer 5.2x20x1.2	1
13	GB/T6185.1	nut M5	1
14	YD45-3.04.00-6	spring base	1
15	YD45-3.04.00-5	front damper spring	1
16	YD45-3.04.00-4	main level	1
17	YD45-3.04.00-3	secondary pull-rod	1
18	GB/T119.2	pin 3x9	2
19	YD45-3.04.00-14	brake control rod	1
20	YD45-3.04.00-9	brake spring	1
21	YD45-3.04.00-10	brake strap	1
22	GB/T845	tapping screw ST4.2X12	2
23	YD45-4.04.00-1	brake spring cover plate	1
24	YD45-3.04.00-17	tension block	1
25	YD45.01.00-16	chain guide block	1
26	YD45-3.04.01-00	right cover	1
27	GB/T6177.1	nut M8	2
28	YD45-3.05.01-00	air filter lock nut	1
29	YD45.05.00-2	lock nut washer 15x26x1	1
30	YD45-4.05.00-1	air filter cover	1
31	YD45.00.00-6	idle adjusting guide set	1
32	GB/T818	screw M5X16	11
33	YD45-4.00.00-1	upper cover plate	1
34	TD45-4.02.00-00	starter assembly	1
35	YD45.04.00-1	guide flow cover	1
36	GB/T818	screw M5X10	1
37	GB/T96	washer 5	1
38	YD45.02.00-2	starter palte	1

Fig 1 GTC45-50 Base Part

No	Code	ITEM	qty
39	YD45.02.00-3	coil spring gland	1
40	YD45.02.00-5	start coil spring	1
41	YD45.04.00-4	start handle	1
42	YD45.02.00-7	start stretching wire	1
43	YD45.04.00-8	LH sheathing	1
44	YD45-4.02.01-00	starter cover	1
45	YD45. 03. 00-1	shock rubber	1
46	YD45-3.03.01-00	base	1
47	YD45. 03. 02-00	shock rubber gland	1
48	YD50.00.00- 9	screw	1
49	YD45.00-00-2	dust cover	1
50	YD38-3.03.02-2	anti-drop plate	1
51	YD38-3.03.02-3	packing washer 24X34X1.5	1
52	YD38-3.03.02-1	petrol cover	1
53	YD45.03.00-2	fuel tube	1
54	YD45.03.03-00	petrol filter componets	1
55	YD45.03.00-7	balancer cover	1
56	YD45.03.00-6	balancer rubber	1
57	YD45.03.00-5	balancer body	1
58	YD38-3.03.00-3	balancer root	1
59	YD45.03.00-25	throttle rod	1
60	YD45.03.00-11	trigger	1
61	YD45.03.00-12	trigger torsion rod spring	1
62	GB/T119.2	pin6X22	1
63	YD45-3.03.00-14	handle cover	1
64	YD45.03.00-13	trigger control rack	1
65	GB/T845	tapping screw ST4.2X25	1
66	YD45.06.00-01	front handle assembly	1
67	GB/T845	tapping ST5X16	4
68	YD45-4.04.00-7	dust shield	1

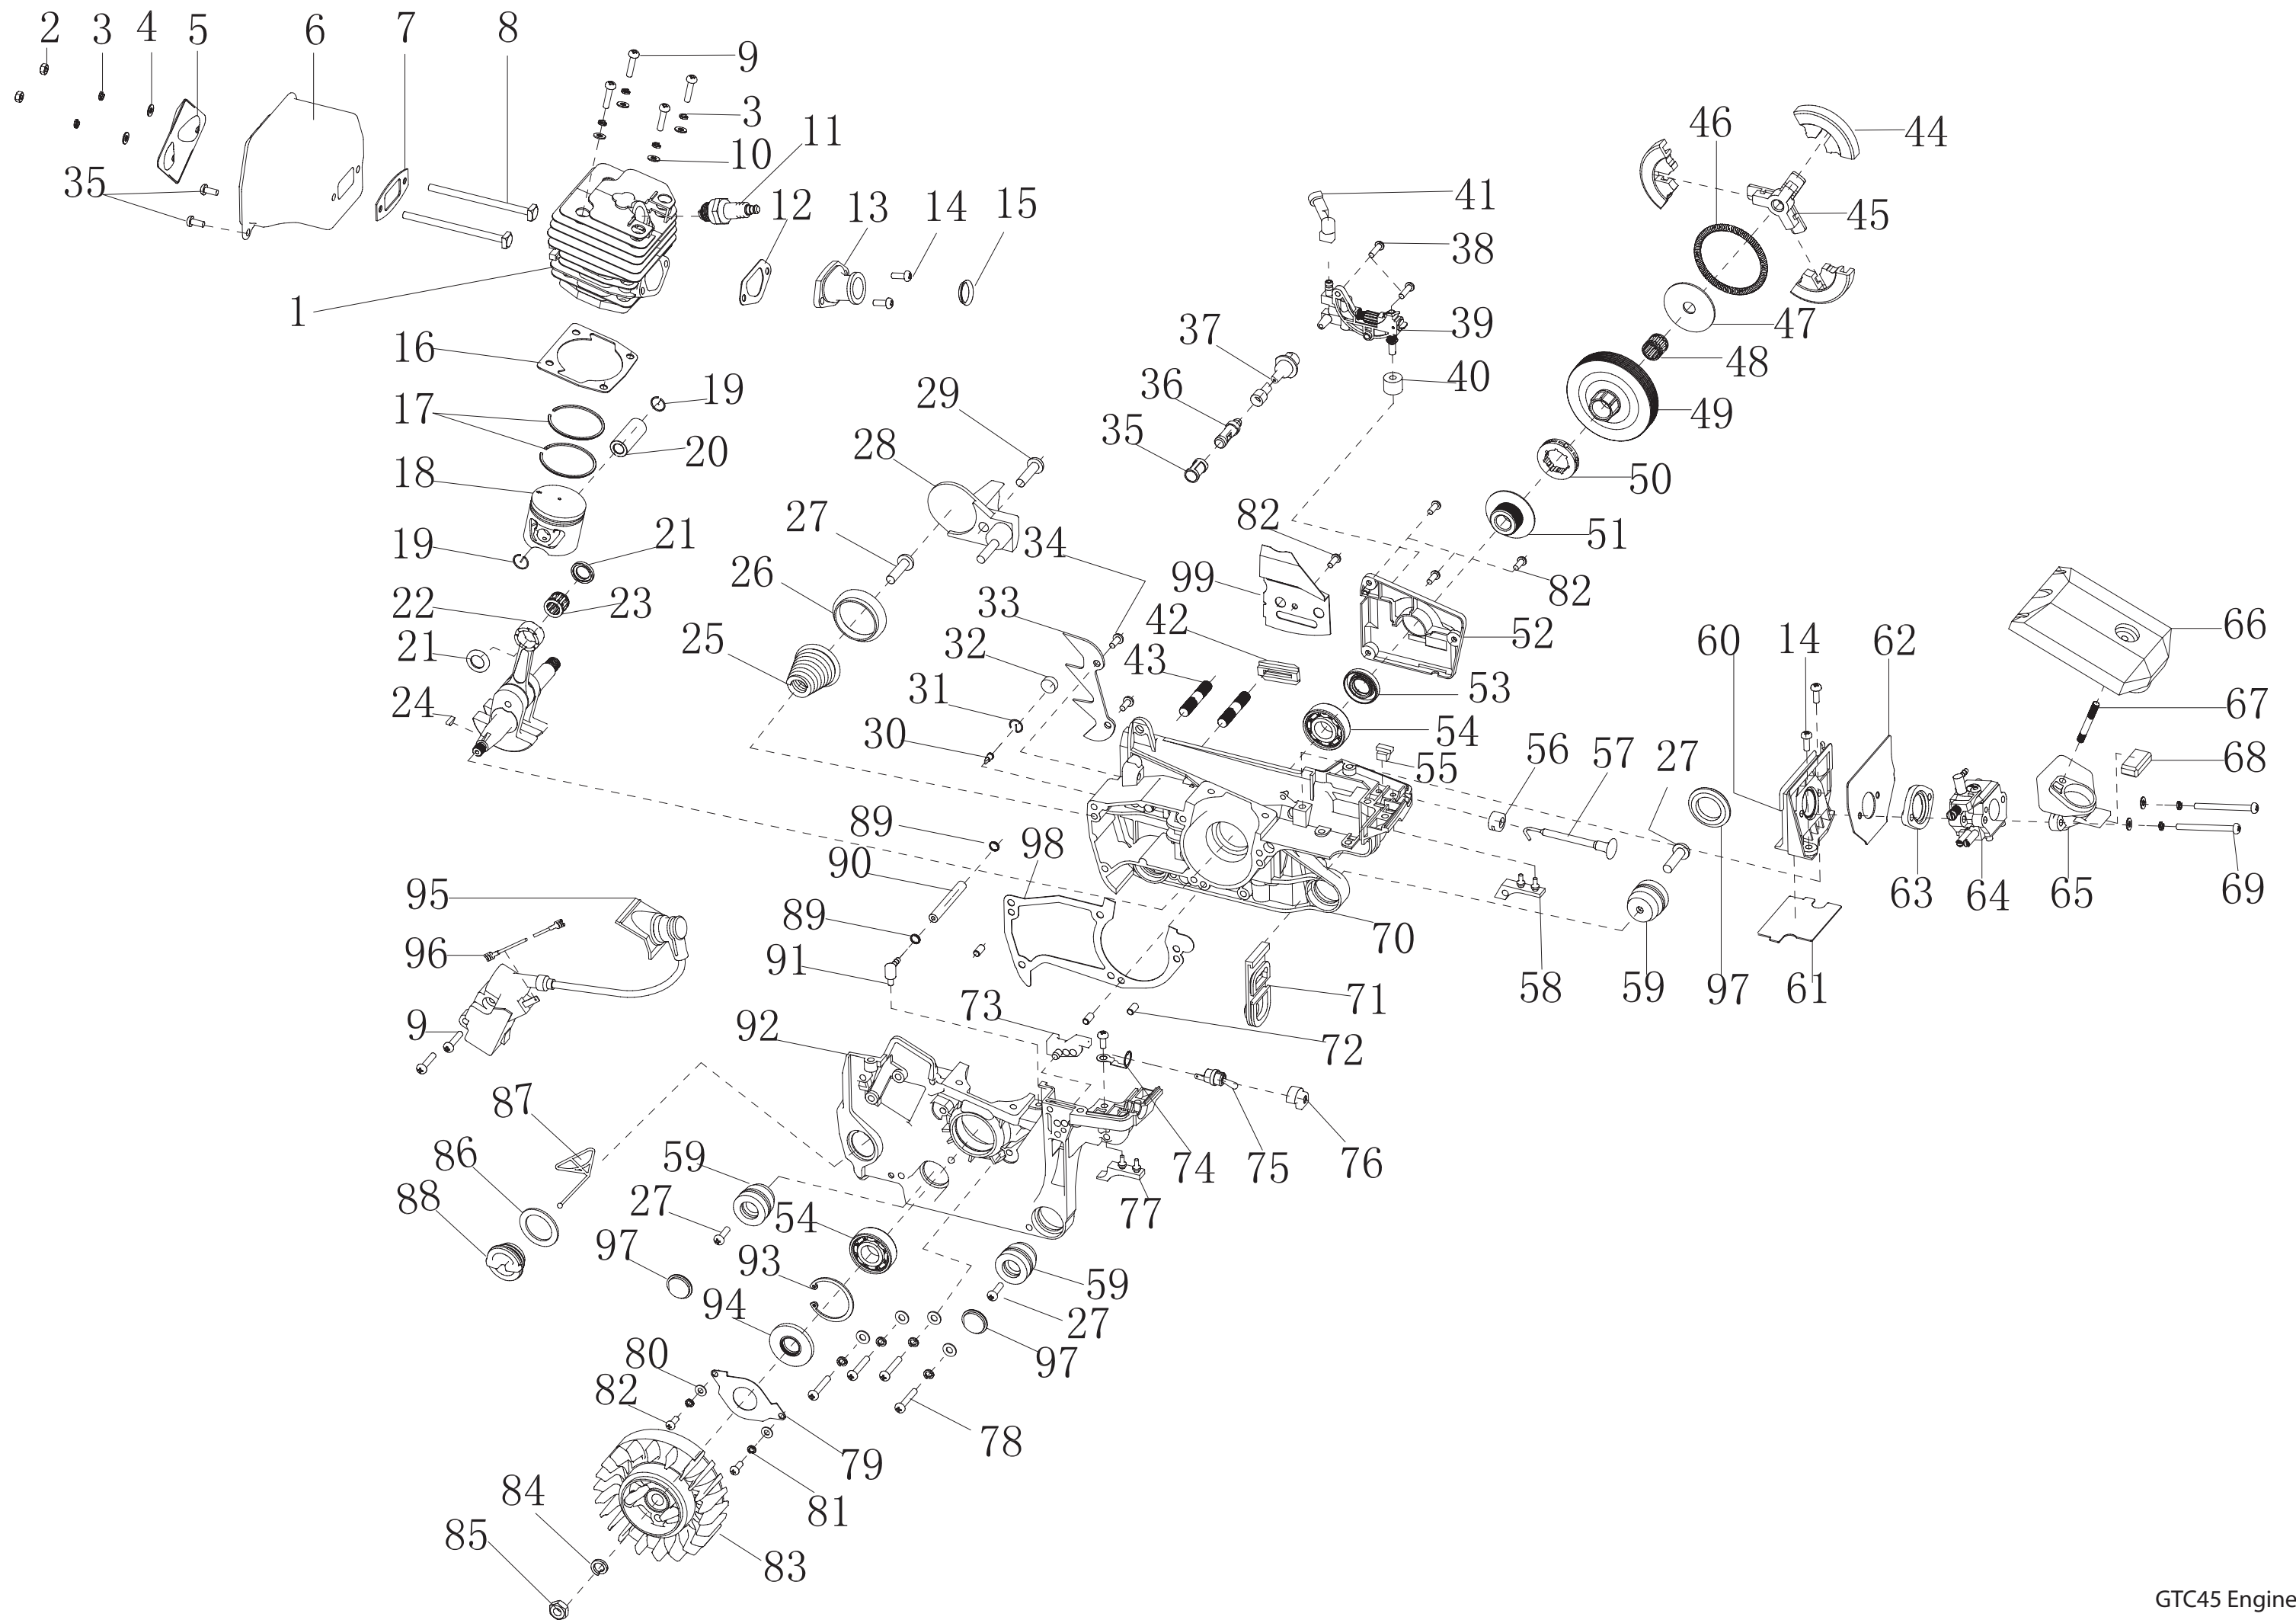

GTC45 Engine part

No	Code	ITEM	qty
1	YD45.01.02-1	cylinder	1
2	GB/T6186	nut M5	2
3	GB/T93	washer 5	15
4	GB/T97.1	washer 5	2
5	YD45.01.09-1	muffler cover plate	1
6	YD45.01.09.01-00	muffler body	1
7	YD45.01.00-2	muffler sealing plate	1
8	YD45.01.00-24	muffler connecting screw	2
9	GB/T70.1	screw M5x20	6
10	GB/T848	washer 5	11
11	YD45.01.11.04-00	spark plug	1
12	YD45.01.02-2	air intake tube sealing plate	1
13	YD45.01.02.01-00	air intake tube	1
14	GB/T818	screw M5X12	4
15	YD45.01.00-17	hold coil	1
16	YD45.01.00-1	cylinder sealing plate	1
17	YD45.01.03-2	piston ring	2
18	YD45.01.03-1	piston	1
19	YD45.01.03-4	piston pin circlip	2
20	YD45.01.03-3	piston pin	1
21	YD45.01.03-5	needle bearing ring	2
22	YD45.01.03.01-00	crank shaft components	1
23	YD45.01.03.02-00	needle bearing 11x15x12.5	1
24	GB/T1099	semicircular key 3x3.5x10	1
25	YD45.00.00-4	conical spring base	1
26	YD45.00.00-3	conical spreader base	1
27	GB/T845	tapping screw ST5X16	4
28	YD45.00.00.01-00	chain shield	1
29	GB/T818	screw M5X16	1
30	YD45.01.01.02-2	aeration jet	1
31	YD45.01.01.02-3	aeration jet circlip	1
32	YD45.01.00-22	sponge transition block	1
33	YD45.01.00-21	pinion rack	1
34	GB/T818	screw M5X10	5
35	YD45.01.00.04-2	oil filter screen	1
36	YD45.01.00.04-1	oil filter	1
37	YD45.01.00-12	oil tube	1
38	GB/T818	screw M4x14	2

GTC45 Engine part

No	Code	ITEM	qty
39	YD45.01.15-00	oil pump	1
40	YD45.01.00-23	sponge transition coil	1
41	YD45.01.00-13	nozzle	1
42	YD45.01.00-16	chain guide block	1
43	GB/T900	double-screw bolt AYM8-M8X26-8.8	2
44	YD45.01.13.01-2	shoe block	3
45	YD45.01.13.01-1	retainer	1
46	YD45.01.13.01-3	clutch spring	1
47	YD45.01.00-19	clutch adjusting washer	1
48	YD45.01.00.10-00	needle bearing 12x15x14.5	1
49	YD45.01.13-1	clutch shell	1
50	YD45.01.00-26	sprocket	1
51	YD45.01.00.06-00	worm	1
52	YD45.01.00-15	cover plate	1
53	YD45.01.00.09-00	oil seal 15x28x4.5	1
54	GB/T276	bearing 6202D grade 15x35x11	1
55	YD45.01.00-8	cushion block	1
56	YD45.01.00-7	choke rod fixation root	1
57	YD45.01.00.03-00	choke rod	1
58	YD45.01.00-11	right shock block	1
59	YD45.01.00.07-00	shock seat	3
60	YD45.01.00.01-00	air intake tube support	1
61	YD45.01.00-4	tie plate	1
62	YD45.01.00-3	sealing plate of air intake support	1
63	YD45.01.00-14	air intake tube flange	1
64	YD45.01.06-00	carburetor	1
65	YD45.01.00.02-00	air intake socket	1
66	YD45.01.08-00	air filter	1
67	GB/T899	double-screw bolt GM5-M5X30	1
68	YD45.01.00-5	cushion of air intake socket	1
69	GB/T818	screw M5X50	2
70	YD45.01.01.02-1	right case	1
71	YD45.01.00-6	dust plate	1
72	GB/T119.2	pin 5x10	3
73	YD45.01.00-9	shock block2	1
74	YD45.01.11-2	ground strip	1
75	YD45.01.11.03-00	flameout switch	1
76	YD45.01.11-1	flameout switch socket	1

GTC45 Engine part

No	Code		qty
77	YD45.01.00-10	left shock block	1
78	GB/T70.1	screw M5X25	5
79	YD45.01.00-20	oil shield	1
80	GB/T97.1	washer 4	2
81	GB/T93	washer 4	2
82	GB/T818	screw M4X10	6
83	YD45.01.10.01-00	flywheel	1
84	GB/T93	washer 8	1
85	GB/T6171	nut M8x1	1
86	YD45.01.00.05-3	sealing washer 20x30x2	1
87	YD45.01.00.05-2	anti-drop plate	1
88	YD45.01.00.05-1	oil cover	1
89	YD45.01.01.01-3	suction tube circlip	2
90	YD45.01.01.01-2	suction tube 2.5X7X10.5	1
91	YD45.01.01.03-00	suction jet	1
92	YD45.01.01.01-1	left case	1
93	GB/T893.1	shield ring 35	1
94	YD45.01.00.08-00	oil seal 15x35x4.5	1
95	YD45.01.11.01-00	igniter	1
96	YD45.01.11.02-00	extinction conductor	1
97	YD45.00.00-2	dust cover	3
98	YD45.01.01-1	case body sealing plate	1
99	YD45.01.00-18	damper	1