


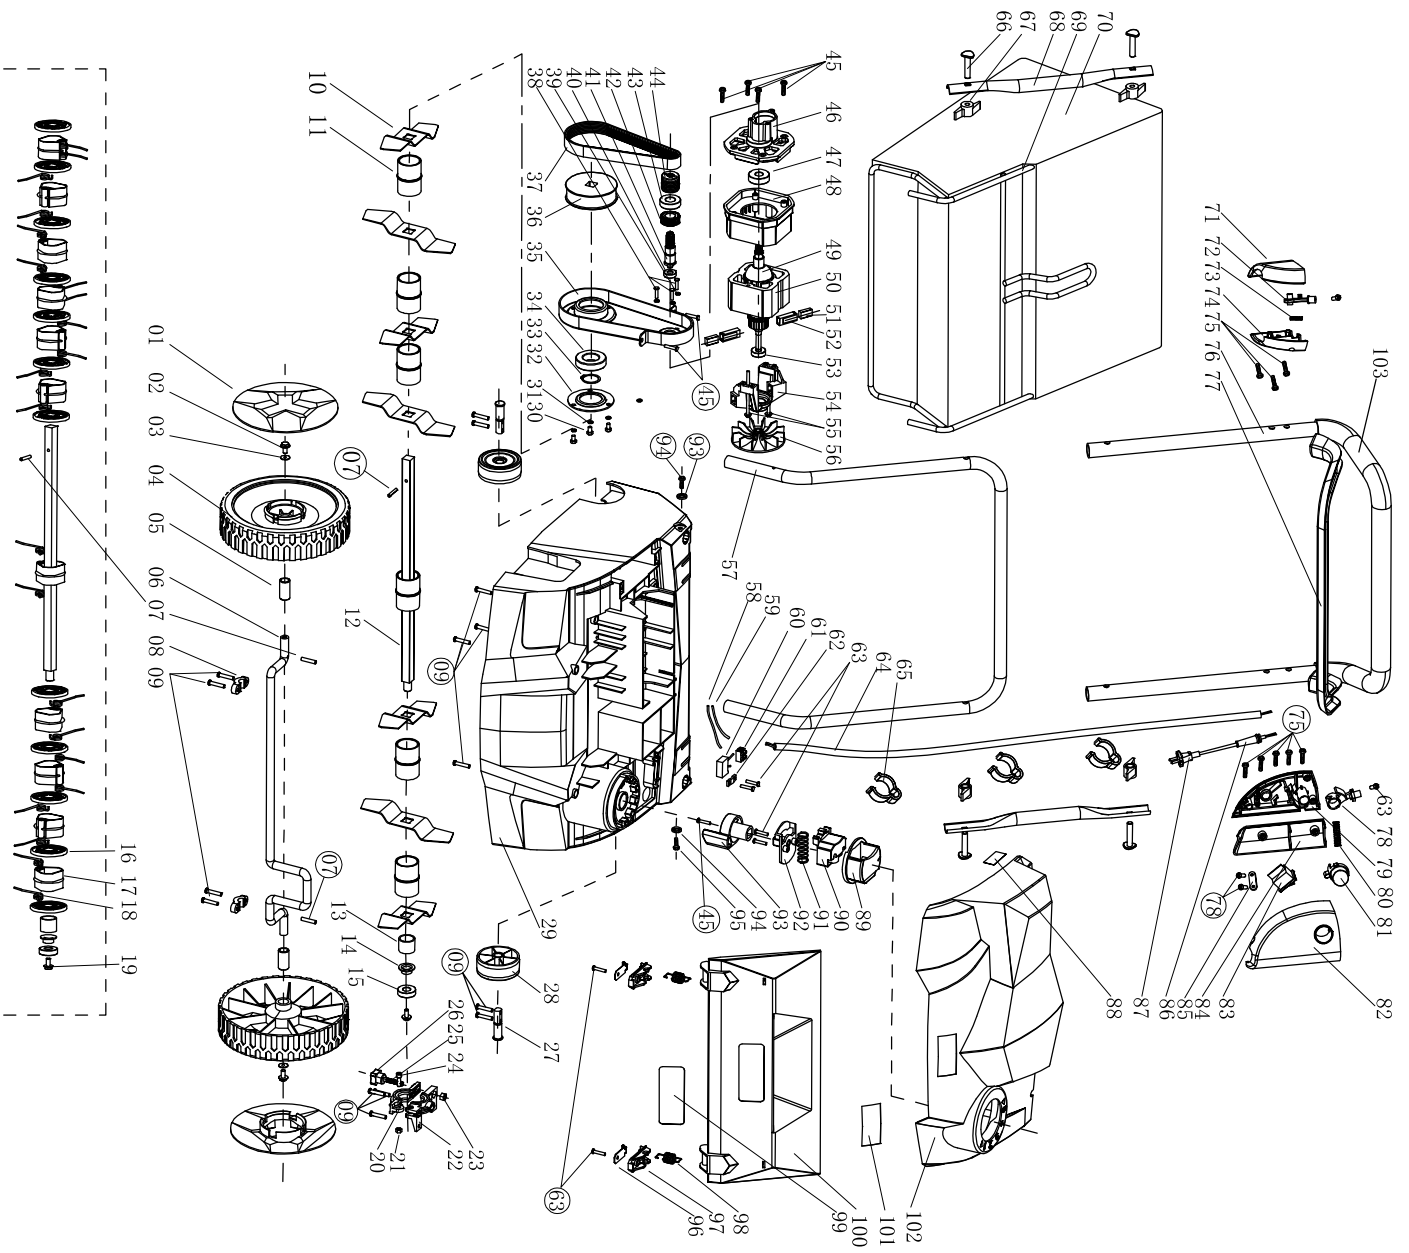

REV1638B

NO	part number	DESCRIPTION
1	REV1638R-1	Front wheel cover
2	REV1638R-2	Bolt M6*12
3	REV1638R-3	Washer Ø20*Ø8*1
4	REV1638R-4	Front wheel
5	REV1638R-5	Front wheel bush
6	REV1638R-6	Front wheel axel
7	REV1638R-7	Split backing pin
8	REV1638R-8	Front wheel clamp plate
9	REV1638R-9	Screw ST5*25
10	REV1638R-10	Blade
11	REV1638R-11	Blade shaft tube
12	REV1638R-12	Blade shaft
13	REV1638R-13	Axel head bush
14	REV1638R-14	Axel head bushing pipe
15	REV1638R-15	Bearing 6001ZZ
16	REV1638R-16	Cutter shaft board
17	REV1638R-17	Cutter shaft holder
18	REV1638R-18	Spring needle
19	REV1638R-19	Bolt
20	REV1638R-20	Bearing gland
21	REV1638R-21	Lock nut M5
22	REV1638R-22	Bearing support
23	REV1638R-23	Hex nut M6
24	REV1638R-24	Bolt M5*20
25	REV1638R-25	Hexagon-headed bolt M6*35
26	REV1638R-26	Knob
27	REV1638R-27	Rear wheel axel
28	REV1638R-28	Rear wheel
29	REV1638R-29	Fuselage
30	REV1638R-30	Screw M5*10
31	REV1638R-31	Light spring washer
32	REV1638R-32	Big shaft cover
33	REV1638R-33	Spring retainning ring
34	REV1638R-34	Bearing 6005ZZ
35	REV1638R-35	Big shaft support
36	REV1638R-36	Big belt wheel
37	REV1638R-37	Belt
38	REV1638R-38	Screw M4*18
39	REV1638R-39	Light spring washer Ø4
40	REV1638R-40	Bearing 698ZZ
41	REV1638R-41	Gear axel
42	REV1638R-42	Big gear

43	REV1638R-43	Bearing 6002ZZ
44	REV1638R-44	Small belt wheel
45	REV1638R-45	Screw ST4*20
46	REV1638R-46	Gear housing
47	REV1638R-47	Bearing 6201ZZ
48	REV1638R-48	Front support of motor
49	REV1638R-49	Armature component
50	REV1638R-50	Field component
51	REV1638R-51	Carbon brush
52	REV1638R-52	Brush holder
53	REV1638R-53	Bearing 608ZZ
54	REV1638R-54	Rear support of motor
55	REV1638R-55	Motor screw ST4*75
56	REV1638R-56	Fan
57	REV1638R-57	Front angle branch
58	REV1638R-58	Motor wire
59	REV1638R-59	Motor wire
60	REV1638R-60	Capacitor
61	REV1638R-61	Terminal block
62	REV1638R-62	Cord clamp plate
63	REV1638R-63	Screw ST4*14
64	REV1638R-64	Connecting wire
65	REV1638R-65	Wire buckle
66	REV1638R-66	Special shape bolt
67	REV1638R-67	Knob
68	REV1638R-68	Intermedia tube
69	REV1638R-69	Collection frame
70	REV1638R-70	Collection bag
71	REV1638R-71	Right down switch box
72	REV1638R-72	Right trigger connection rod
73	REV1638R-73	Switch trigger spring
74	REV1638R-74	Right up switch box
75	REV1638R-75	Screw ST4*25
76	REV1638R-76	Rear angle branch
77	REV1638R-77	Switch trigger
78	REV1638R-78	Left trigger connection rod
79	REV1638R-79	Left down switch box
80	REV1638R-80	Switch button spring
81	REV1638R-81	Switch button
82	REV1638R-82	Left up switch box
83	REV1638R-83	Switch
84	REV1638R-84	Switch box cover
85	REV1638R-85	Cord clamp plate
86	REV1638R-86	Cord sheath
87	REV1638R-87	Supply plug

88	REV1638R-88	Data label
89	REV1638R-89	Button cover
90	REV1638R-90	Heighten button
91	REV1638R-91	Reduce spring
92	REV1638R-92	Support
93	REV1638R-93	Heighten pivot
94	REV1638R-94	Backing board
95	REV1638R-95	Screw M4*12
96	REV1638R-96	Sheeting
97	REV1638R-97	Clamp plate
98	REV1638R-98	Extension spring
99	REV1638R-99	Warning label
##	REV1638R-100	Tail-board
##	REV1638R-101	Logo
##	REV1638R-102	Up cover
##	REV1638R-103	Spong cover