


RPLT 2642 2021 - machine

Pozice	Obj.číslo	Popis	Počet
2	02020050040	Clutch drump	1
3	03120010005	washer	1
4	03120020004	washer	1
5	03090010057	needle bearing	1
6	70070060032	clutch assy	1
7	70070080039	Under the fixed plate	1
8	02080020104	Φ 26 rubber bumpers	1
9	03010010058	Screw M5*25	2
10	03010010056	Screw M5*14	1
11	70070080038	Up plate	1
12	03010010060	Screw M6*20	4
13	02040030003	Interval set	1
14	02040010008	Oil bearing rubber sleeve combination	3
15	02020060152	Hard shaft	1
16	02010010072	Aluminum tube	1
17	70030070256	Left control box	1
18	03030060008	locknut	2
19	70030070599	Control handle	1
20	02020110045	Manipulation of the torsional spring	1
21	70030070600	Self-locking handle	1
22	03010060053	screw M5*20	2
23	03010040072	Self tapping screw	4
24	02050050289	Parking switch combination	1
25	70030070249	Right control box	1
26	02120030007	Threaded pipe	1
27	02050040126	The gas line	1
28	03030070016	Hexagonal thin nut	2
29	70030180133	bail	1
30	70030160007	Handle positioning ring	1
31	03020020012	Screw combination	1
32	03010010011	screw	2
33	03040020020	The gasket	2
34	70030160081	Mention of the black	1
35	02110030188	Mention the platen	1
36	02110030189	Handle lower pressing plate	1
37	02020160969	Coupling	1
38	03010110132	Screw combination	1
39	03010080004	Socket head screw combination	1
40	70070090016	Aluminum pipe joint	1
41	70030180089	Clamping screw	1
42	03060030005	Bolt combination	1
43	03040050047	A gasket	1
44	02050080003	Soft shaft	1
45	02050080009	Soft shaft support	1
46	02010010384	Bent aluminum tube	1

47	03010010058	Socket head screw combination white	2
48	70030030084	The cutter cover	1
49	03010110057	Screw combination	1
50	02020160208	clamp	1
51	02050080049	Flexible shaft coupling	1
52	70030030233	The cutter's cover	1
53	03020020027	Screw combination	2
54	02020070008	Small blade with plastic cover	1
55	03030060008	locknut	2
56	02050220078	Rope wheel box set	1
57	02050060270	Strap combination	1

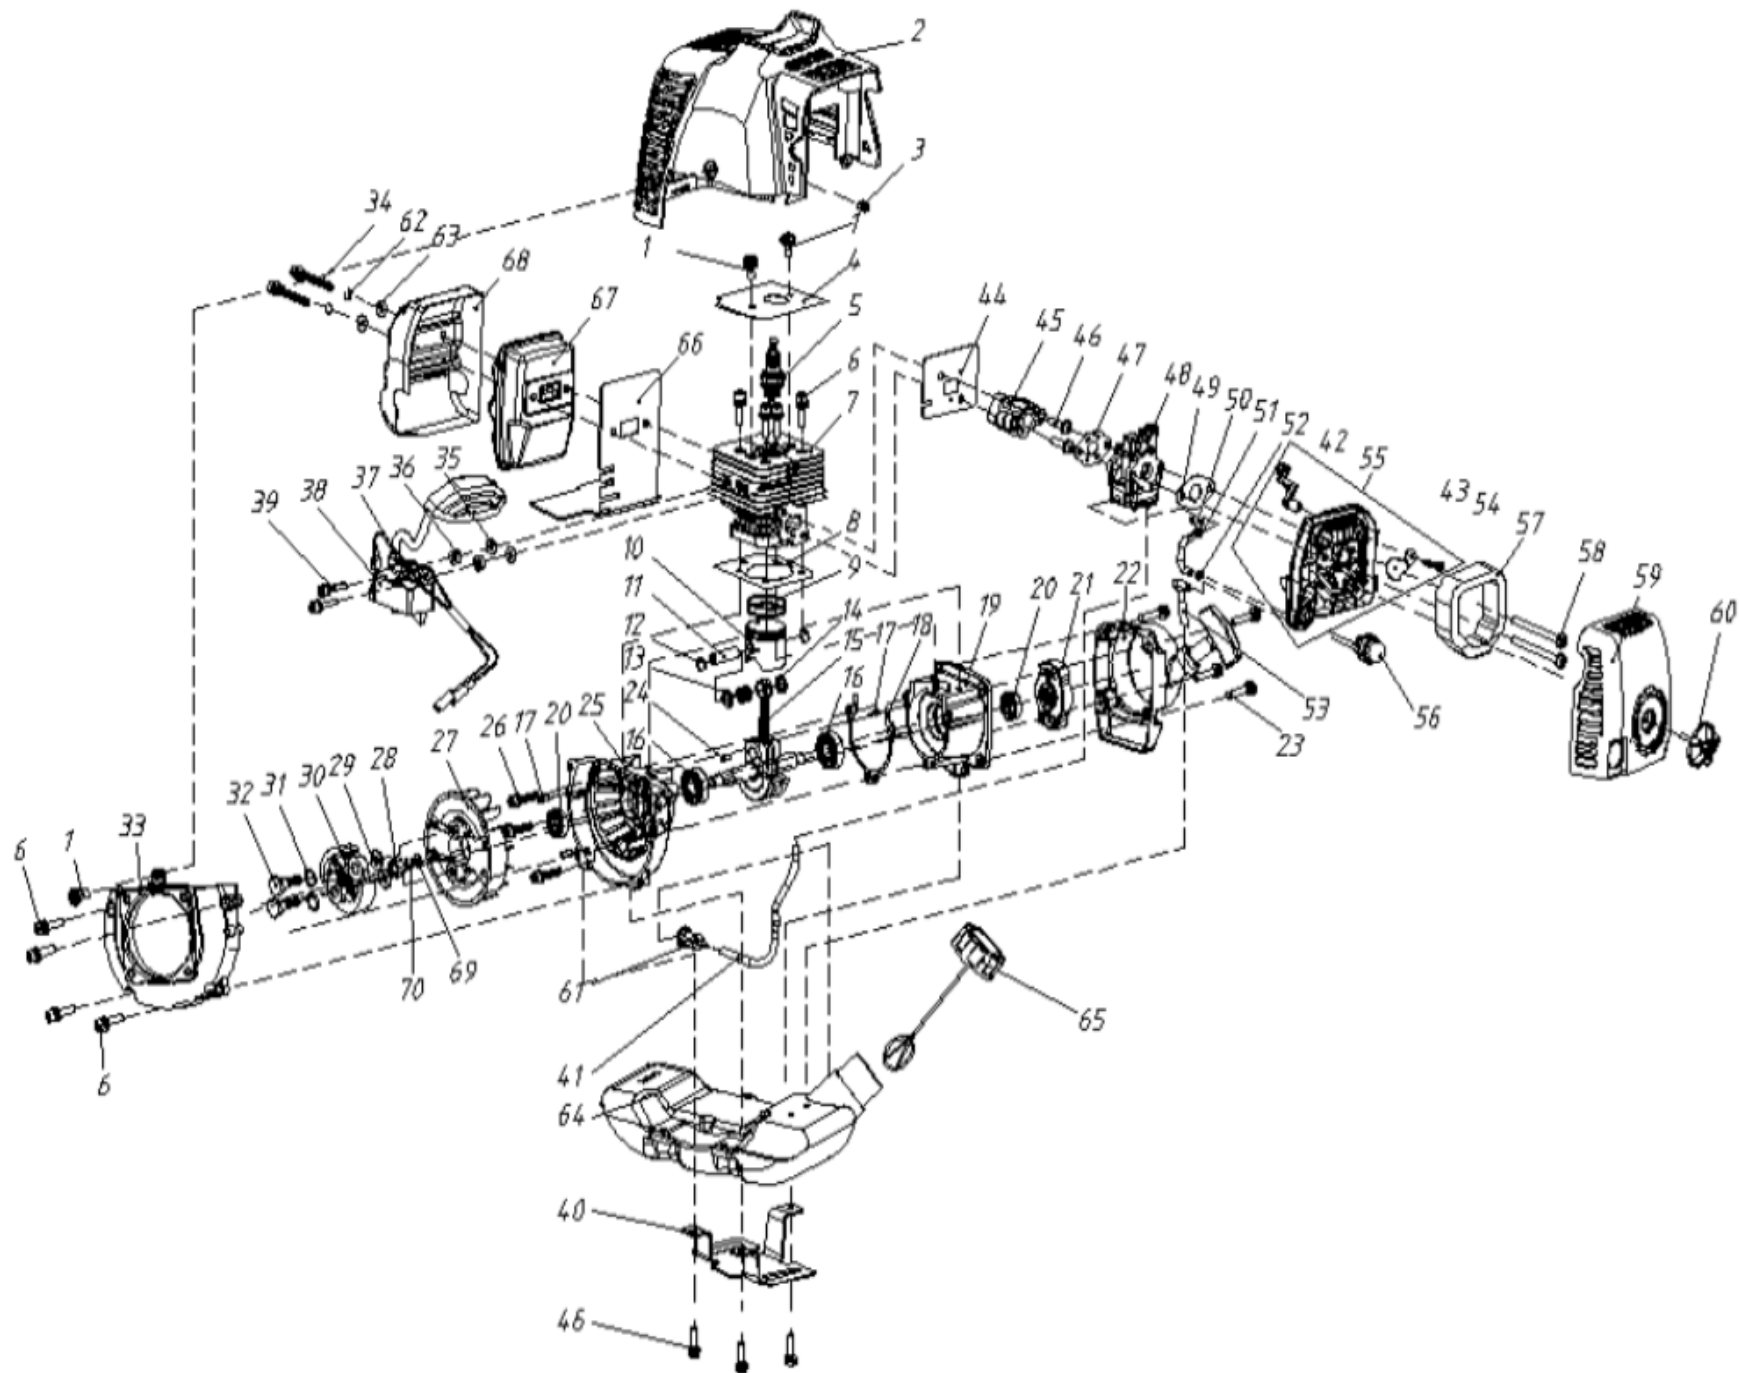

RPLT 2642 2021 - engine

Pozice	Obj.číslo	Popis	Počet
1	03020020053	Screw M5*12	3
2	70030030625	Cylinder cover	1
3	02080020012	Ignition wire retaining sleeve	1
4	02020160187	Top air guide plate of cylinder block	1
5	03130010013	Spark	1
6	03010010062	Screw M5*20	8
7	70070130001	Cylinder	1
8	02070010020	Cylinder gasket	1
9	02020020003	Ring ,piston	2
10	02010020006	Piston	1
11	2020010047	Pin ,piston	1
12	02020030017	Ring, snap	2
13	03090020018	Small head needle bearding	1
14	02020150007	Check out the gasket	2
15	02020120066	Crank shaft assy	1
16	03090010028	Bearing	2
17	03060010002	Pin	4
18	02070010110	Crank gasket	1
19	70070050002	Rear crankcase	1
20	3100010045	Oil seal	2
21	02050100005	Start pully	1
22	02050070002	Starter	1
23	03020020027	Srew M5*16	4
24	03070010001	woodruff key	1
25	70070050001	Front crankcase	1
26	03010010069	Srew M5*30	3
27	02050030018	Magneto rotor	1
28	03030020003	Nut M8	1
29	03040050052	washer	2
30	02050160022	Clutch assy	1
31	03040050042	washer	2
32	02020130001	Clutch bolt	2
33	70070030024	Fan cover	1
34	03010010049	Srew M5*50	2
35	03040010008	washer	2
36	02070010048	heat insulated pad	2
37	02050050137	Wire, lead	1
38	02050030126	Ignition coil comp	1
39	03020020054	Srew M4*20	2
40	02020160443	Oil tank protect rack	1
41	01040010070	Oil inlet	1
44	02070010078	Insulator gasket	1
45	02110030036	Insulator	1
46	03020020012	Srew M5*20	5
47	02070010061	Carburetor gasket	1

48	02050020050	Carburetor	1
49	02070010099	Carburetor gasket 2	1
50	01040010070	short fuel pipe	1
51	02020040036	jump ring	1
53	01040010070	return fuel pipe	1
55	70030040392	Inside cover ,cleaner	1
56	02050020127	priming	1
57	02090010030	Air filter element	1
58	03020020031	Srew M5*60	2
59	70030040131	Cover, cleaner	1
60	70030180372	knob	1
61	02050120002	fuel filter	1
62	03050010014	washer	2
63	03040020019	washer	2
64	70050030096	fuel tank	1
65	02110020026	Cap,fule tank	1
66	02070010186	Muffler gasket	1
67	02050010077	Muffler assy	1
68	02050010001	Muffler cover	1
69	03040020018	washer	1
70	03050010008	washer	1